


Installation of PAROC wire net mat with steel wire or clips

Note: In some applications such as fire insulation solutions local regulations must be considered.


Installing PAROC wire net mat with steel wire stitch:

Distance of the stitches is \leq 100 mm.

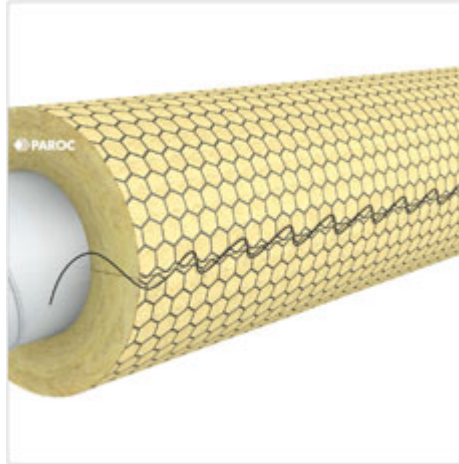

Installing PAROC wire net mat with steel clips:

The wire net mat is fastened around the duct by tying the net steel wires with steel clips using a special tool. The maximum distance between points of fixture is 100 mm.

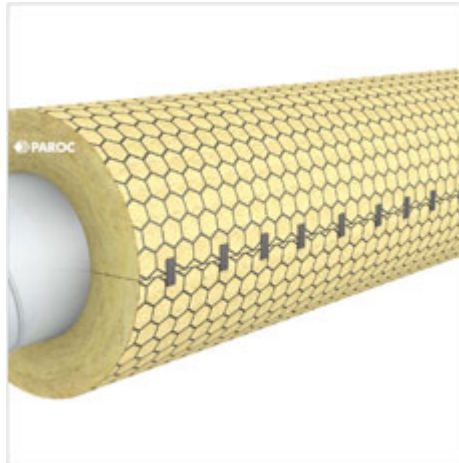

Warranty: Our recommendations are based on our most up-to-date knowledge and experience. As the products are used outside our control we cannot take responsibility for any damage which may be caused when using the product.